

DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

Always On™ Module for Subaru BRZ

Thank you for your purchase of this unique lighting module for your Subaru BRZ! With this module, you'll be able to keep your headlight LEDs (boomerangs) on as the DRL, and keep your factory DRLs on with your headlights at night.



1. Gain access to the back of the DRL assembly on either side of the vehicle. We recommend doing so by going through the wheel well.

2. Unplug your factory DRL connector and plug the smaller set of matching connectors from the harness inline. Run each of the larger sets of connectors to each headlight. Be sure to keep wiring away from any parts on the vehicle that get hot.



3. Unplug the headlight connector on one side of the vehicle and plug the new headlight module inline, between the headlight and vehicle harness connectors. Repeat the process for the other side of the vehicle.

4. Turn on your vehicle's headlamps to confirm function. If the DRL LEDs are not illuminated with the headlamps, please ensure the connectors are securely connected, and fully plugged in.

Please note: When the headlamps are on, the DRL LEDs will illuminate at half brightness. During the day, while driving with the headlights off, your DRL LEDs will illuminate at full brightness.

Troubleshooting: Remember, this module does not affect the factory DRL function. If you believe your DRLs are no longer working during the day with the module installed, remove the module, and ensure the DRLs turn on. **The factory DRL only turns on when the car is started, the shifter is in "Drive", AND the e-brake is fully released.**

Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (9a-5p CST) or **contact@diodedynamics.com**.



