


DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

Cadillac Sidemarker Installation Guide

Thank you for your purchase of this unique product for your Cadillac! With this plug-and-play LED Sidemarker, you will be able to upgrade your factory sidemarker to a brighter, more modern appearance on the road. This product is a direct replacement for your factory sidemarker.

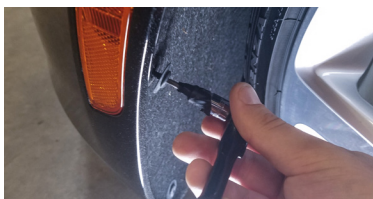

1. Remove the fasteners located in the fender liner inside the wheel well. Pull back on the fender liner to access the sidemarker.



2. Remove the sidemarker by depressing the clip then pushing it out.



3. Rotate the factory socket counter clockwise to remove it. Set the factory sidemarker aside, and remove the bulb from the socket.



4. Plug the connector from your new sidemarker into the socket. Ensure you have the correct polarity by hitting the unlock button. If the sidemarker doesn't illuminate, flip the connector 180°.



5. Reinstall the socket back into your new sidemarker to seal.



6. Place the sidemarker back into the bumper, clipping it into place. Reinstall the fasteners. Repeat for other side.

