


The following instructions are for Toyota 4Runners with an Auxiliary Switch Bank. If you do not have the Auxiliary Switch Bank, use the included toggle switch adapter wire to route a switch. All power sources must be fused.

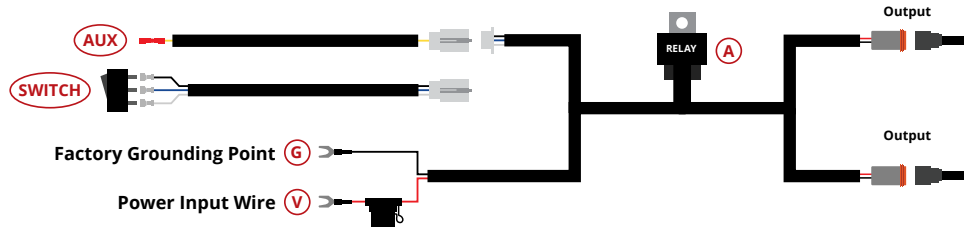

12. Determine a suitable location to mount the relay, (A) near the battery or main power terminal.
 13. Connect the red power input wire (V) to the positive battery/power terminal. Connect the black ground wire to the negative battery terminal or a factory grounding point. (G)
 14. At the white connector, unplug the switch wires from the harness, and connect the extra pigtail here instead. Using the butt connector at the end of the pigtail, crimp the yellow wire to an OEM Auxiliary Switch wire lead. (AUX)
- NOTE:** Power will be drawn from the battery, so any OEM Auxiliary Switch wires can be used, regardless of amperage rating.
15. Route the output wire(s) to the light bar(s), avoiding any moving parts or direct contact with heat sources. Plug the output connector(s) into the light bar(s).
 16. Loosely push the bumper into place and check light bar fitment. If contact occurs, move the light bars rearward in the slots.
 17. Reverse steps 1 through 6 to reinstall the bumper and complete installation.

NEED MORE HELP?

Scan the QR code to link to our installation video online!

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time - no guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.



This installation guide is for the following SKUs:

- DD6759 4Runner SS30 Stealth Lightbar Buckets
- DD6760 4Runner SS30 Single Stealth Light Kit White Combo
- DD6761 4Runner SS30 Single Stealth Light Kit Amber Combo
- DD6762 4Runner SS30 Single Stealth Light Kit White Driving
- DD6763 4Runner SS30 Single Stealth Light Kit Amber Driving

- DD6764 4Runner SS30 Dual Stealth Light Kit White Combo
- DD6765 4Runner SS30 Dual Stealth Light Kit Amber Combo
- DD6766 4Runner SS30 Dual Stealth Light Kit White Driving
- DD6767 4Runner SS30 Dual Stealth Light Kit Amber Driving

DIODE DYNAMICS


PERFORMANCE LIGHTING TECHNOLOGY

2014-2019 Toyota 4Runner SS30 Stealth Lightbar Kit Installation Guide



Thank you for your purchase of this custom-designed LED lightbar kit for your 2014-2019 Toyota 4Runner! This kit utilizes both factory and included hardware from the light bar to mount the bracket to the vehicle.


Tools Needed: 10mm socket, 14mm wrench, flathead screwdriver or plastic trim tool

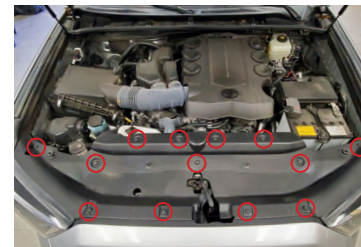

1. Remove the thirteen push-rivets holding the core support trim panel in place. Push down in the center of each push-rivet and then use a plastic trim removal tool or flathead screwdriver to extract the push-rivet.


Reset the push-rivets upon removal by pushing the center section back through the top.

See inside for further instructions.

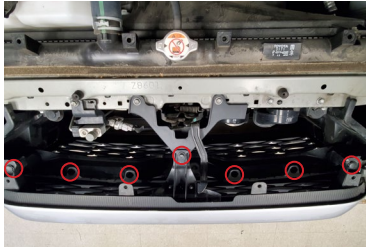

2. Using a trim removal tool or flathead screwdriver, remove the six plastic push-rivets shown in the image to the left.

Then using a 10mm socket, remove the screw in the center.

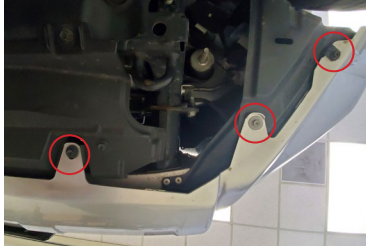

3. Using a 10mm socket, remove the six screws along the bottom of the bumper (passenger's side shown in picture to the left).

Then reach up from underneath the vehicle and disconnect the factory fog lights.



4. Using a 10mm socket, remove the three screws from the edge of the front bumper in the wheel well.




5. Using a trim removal tool, pull the upper edge of the bumper off the snap feature, and slide the lower two screw-clips off the bumper. Then pull the corner of the bumper away from the fender.

Repeat this step on the other side of the bumper.




6. With help from a second person, pull the bumper straight forward to release snaps around the headlights and remove the bumper.

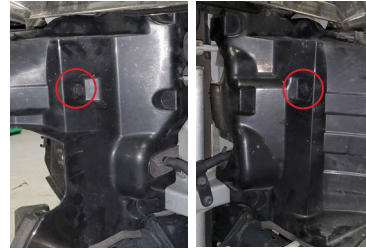

7. Using a trim removal tool, remove the two plastic push-rivets from the air dams.

Do not remove the air dams.

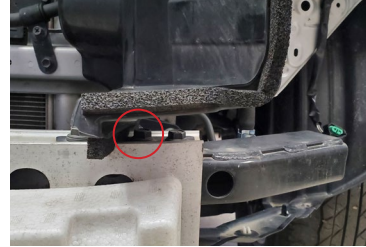

8. Using a 14mm wrench, loosen the second from the outboard bolt on the bumper bar (driver's side shown in picture to the left).



9. Slide the open-slot of your new Diode Dynamics Toyota 4Runner SS30 brackets under the air dams to the bolts loosened in the previous step.



10. Loosely secure the brackets to the air dams with the provided M6 screw, washer, and nut.



11. Install your Stage Series 30" light bars in the brackets with the provided flanged-head M6 hardware. For two bars, we suggest installing in the 1st and 6th, or 1st and 7th, slots from the top.

Then tighten all hardware.

See back for further instructions.