


DIODE DYNAMICS

2016+ Toyota Tacoma

Stealth Light Bar Kit Installation Guide



7. Secure the brackets to the crash bar support. To access the mounting points, reach behind the plastic shroud and the back of the headlight. Hand-tighten the original 14mm bolts first and then tighten them with a 14mm socket. You can also gain access to the mounting points through the wheel well if you wish.

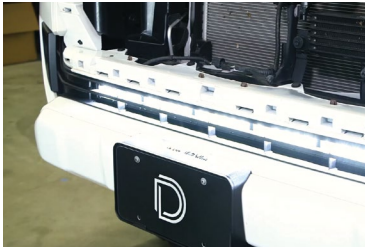

8. Route your wiring and test thoroughly. Reinstall the grille to complete the installation.

NEED MORE HELP?

Scan the QR code to link to our installation video online!

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time – no guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.

YouTube



Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (10a-5p CST) or contact@diodedynamics.com.

This installation guide is for the following SKUs:

DD6070 Tacoma SS30 Stealth Lightbar Kit White Driving
DD6071 Tacoma SS30 Stealth Lightbar Kit White Flood
DD6072 Tacoma SS30 Stealth Lightbar Kit White Combo

DD6073 Tacoma SS30 Stealth Lightbar Kit Amber Driving
DD6074 Tacoma SS30 Stealth Lightbar Kit Amber Flood
DD6075 Tacoma SS30 Stealth Lightbar Kit Amber Combo

DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

2016+ Toyota Tacoma

Stealth Light Bar Kit Installation Guide



DIODE DYNAMICS

2016+ Toyota Tacoma Stealth Light Bar Kit Installation Guide

Thank you for your purchase of this custom-designed LED light bar kit for your 2016+ Toyota Tacoma! This kit utilizes both factory and included hardware to mount the bracket to the vehicle.

**3 YEAR
WARRANTY**

Tools Needed: 10mm socket, 10mm box wrench, 14mm socket flat head screwdriver, plastic trim tool



WATCH THE INSTALLATION VIDEO ONLINE!


Scan the QR code on page 3



1. Remove the grille. To do so, remove the two 10mm bolts and two plastic rivets holding it in place.




2. Pull straight back on the grille to remove it from the truck. Set the grille aside on a soft surface.

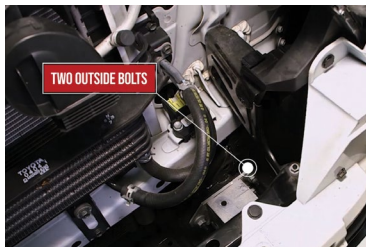

3. Remove the two outside 14mm bolts from the crash bar support. Repeat for the other side.

DIODE DYNAMICS

2016+ Toyota Tacoma Stealth Light Bar Kit Installation Guide

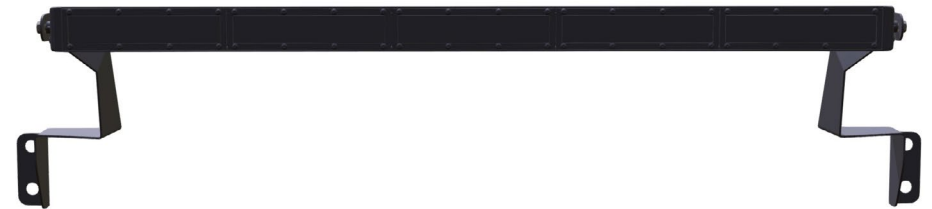

4. Set your light bar brackets in place by pushing the black plastic shroud out slightly and maneuvering the brackets until they sit flush. Do not screw the brackets into place just yet; you simply want to set them in place.



5. Mount the light bar to the brackets, only hand-tightening the hardware at first.



6. Once the light bar has been mounted and properly aligned, tighten the hardware using a 10mm box wrench. In order to gain access to tighten the hardware, push the plastic shroud out slightly. The space is tight, so be patient and use small motions to tighten the bolts down.

See back for further instructions.