


DIODE DYNAMICS
2015+ Subaru WRX/STi
LED Driving Light Kit Installation Guide



6. Using the factory mounting points, mount the bracket and replace the original screws, only hand-tightening them.

Please note: the bracket pieces have been designed to allow for adjustments to ensure proper fitment with the bumper.

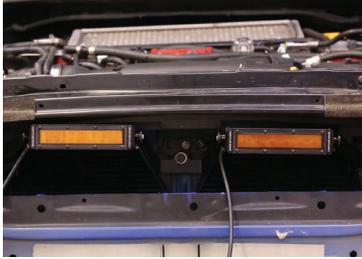

7. Before tightening all the mounting hardware, ensure the light bars are properly aligned with the bumper. Test thoroughly and replace the factory bumper to complete the installation.

NEED MORE HELP?

Scan the QR code to link to our installation video online!

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time - no guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.

YouTube



Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (9a-5p CST) or **contact@diodedynamics.com**.

Visit **www.diodedynamics.com** to find more products for any vehicle.

100% SATISFACTION
GUARANTEE

3 YEAR
WARRANTY



DIODE DYNAMICS
PERFORMANCE LIGHTING TECHNOLOGY

2015+ Subaru WRX/STi
LED Driving Light Kit Installation Guide



DIODE DYNAMICS

2015+ Subaru WRX/STi

LED Driving Light Kit Installation Guide

DIODE DYNAMICS

2015+ Subaru WRX/STi

LED Driving Light Kit Installation Guide

Thank you for your purchase of this custom-designed LED driving light kit for your 2015+ Subaru WRX/STi! This kit utilizes both factory and included hardware from the light bar to mount the bracket to the vehicle.

**3 YEAR
WARRANTY**

Tools Needed: 10mm and 12mm socket wrench, plastic trim removal tool



WATCH THE INSTALLATION VIDEO ONLINE!

Scan the QR code on page 3



1. Using a 10mm socket and plastic trim removal tool, remove the 6 bolts and 4 plastic rivets located on the edge of the bumper inside the engine bay.



2. Next, remove the plastic rivet located between the fender and the bumper. Repeat on the other side. Then, remove the 6 plastic rivets located below the bumper.



3. With the bolts and rivets removed, detach the bumper from the car by pressing the clips located along the side of the bumper below the headlight. Repeat on the other side. Pull straight back and set the bumper aside on a soft surface.



4. With the bumper removed, locate and remove the 12mm bolt **A** in the center and the two 10 mm bolts on the sides. **B**

5. Using the included hardware, attach both light bars to the bracket, only hand-tightening them. See diagram below.



See back for further instructions.