


Thank you for your purchase of the Diode Dynamics LED Driving Light Kit. This guide describes the installation process required to wire your kit to your factory high beam switch.



1. Access the fuse box located in the engine bay. Remove the fuse box cover and set it aside.

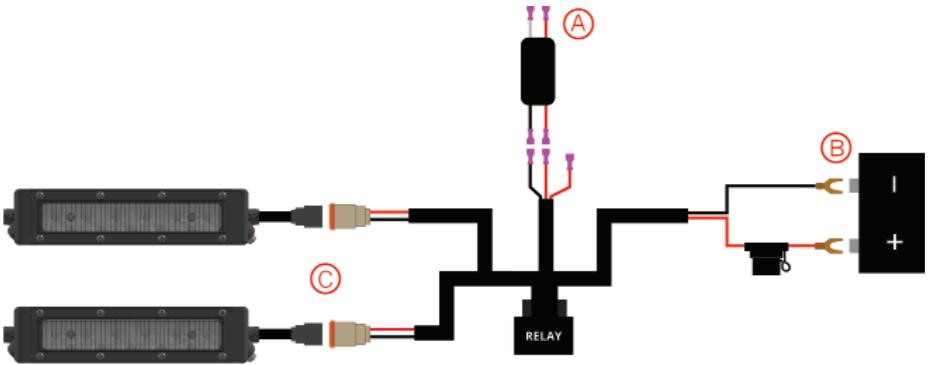

2. Remove the 12mm nut and loosen the 10mm nut on the battery posts.




3. Lay out your Diode Dynamics wiring harness to ensure the connectors are in the correct spots.

4. To connect your driving light kit to your high beams, remove the 15A high beam fuse (fuse 7) and 30A low beam fuse (fuse 6) located in the fuse box.


**Please note:** If you would like to connect the kit to a toggle switch instead, remove the high beam module **A** from the harness.



5. Install the included spade connectors onto both fuses. To do so, line up the slot with one of the spades on the fuse and slide the spade connector over to lock it into place. Repeat the process for the other fuse.

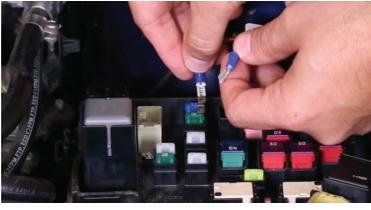

6. Reinstall the fuses back into the fuse box, ensuring the 15A fuse goes into the high beam slot (fuse 7) and the 30A fuse goes into the low beam slot (fuse 6).

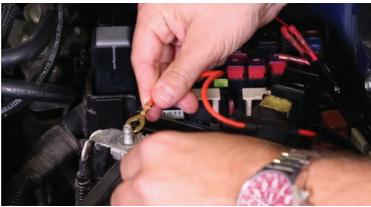

7. Connect the module from the wiring harness to the spade connectors on the fuses Ⓐ. Connect the red wire to the 15A high beam fuse (fuse 7) and the white wire to the 30A low beam fuse (fuse 6).



8. Connect the power and ground ring terminals to the battery posts Ⓑ. Refasten the 12mm nut and tighten the 10mm nut.

9. Connect the Deutsch connectors to the light bars Ⓒ.

10. Test the kit thoroughly, and tuck all wires to finish the installation.

### **NEED MORE HELP?**

**Scan the QR code to link to our installation video online!**

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time - no guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.

YouTube



Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (9a-5p CST) or **contact@diodedynamics.com**.

**100% SATISFACTION  
GUARANTEE**

**3 YEAR  
WARRANTY**

